 
 
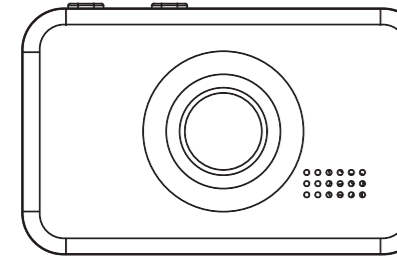 


INSTRUCTIONS

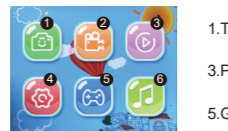

Please read the instruction manual carefully before using the product.
Contains important information , please save it properly

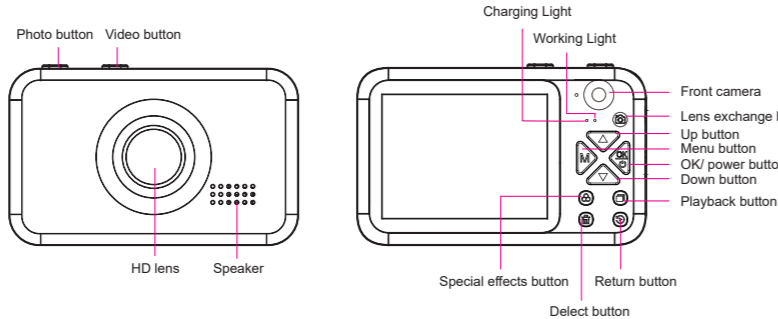

- 1.Taking pictures
- 2.Video
- 3.Playback
- 4.Settings
- 5.Games
- 6.MP3

【Power button/OK button】 :
Long press power on/off, Short press Short press is Ok/comfirm function

Photos function :
When choose photo function ,TF card insert in camera when take photo

- 1.Take photos
Enter into the taking pictures interface, short press Photo button to take the pictures
2. Filter/fun mirror/bumper sticker effect short press **【Special effects button】**
3. Zoom function: long press **【up button】 / 【down button】** to achieve zoom photography

Video Function:

- select video function, must be need to insert TF card to recording, no card prompt: "No card", when the card space is insufficient, will prompt: "Card full".
- 1.Enter into video interface, short press video button to recording video
 2. Change the lens: Short Press **【Lens exchange button】** , the Lens will fade out, the front of the Lens will be displayed, repeat the same method, can switch before and after the Lens, this function is also applicable to the photo function, can be used for Selfie. Single-lens models do not have this feature.
 3. Exit: Short Press: **【 return button】**

Playback function:

1. Short press Playback button enter into the playback interface.
2. Short press (Up/Down button) to select the picture/video,Short Press **【OK/Power button】** to play the video or to stop
3. Short press the **【delete button】** drop prompt to delete the video/picture, Short press (Up/Down button) to select the picture/video,Short Press **【 OK/power button】** to confirm whether to delete the PICTURE/VIDEO.

Game Function Select Game Function

1. Game Selection Short Press **【Up button】 / 【Down button】** Game Selection
2. Enter the game short press **【Ok/power button】** enter the game
3. Exit the Game Short Press: **【Return button】** exit the game

Setting function:

- select the setting function, you can set the user's personality configuration
Key: Short press the MODE button to enter into the setting, press (Up/Down button) to select the settings
【Ok /power button】 confirm the selected settings
【Return button】 exit the selection settings
1. FORMAT: In the settings to find the format options, short press **【Ok/power button】** to format
 2. Version number selection version display, you can see the system version number.
 3. Date and time select time settings to set machine time

MP3 mode

- When insterting the TF card to cameras, the cameras will be generate a "MP3" file,
Then put the music or story into this "MP3"file.
Please note:
1. The FILE MUST BE IN MP 3 format
 2. Files must be placed in the MPS or STORY directory.
 3. Please set the file name in English, do not support the Arabic file name
 4. This camera acts as a story player

Other features

- 1.Charging modes:
Plug it into Micro USB. Red Light means it's charging, blue means it's full.
2. Reset:
Reset when the camera appears abnormal, "A fine needle can be inserted into the reset hole to reset the machine."
3. Atuo Standby:
When the standby camera is not in use, it will enter the automatic standby mode. When the standby mode is not in use, it will automatically shut down.

4. USB MODEL& PC camera
when the cameras turn on ,then connecting to a computer by USB cable.
A.When it has no TF card,it will enter the PC Camera mode automatically.Equipped with a TF card and will automatically.
B.enter the card readind mode.When the cameras turn off, then connecting to acomputer by the USB cable, the cameras will bein charging.

[specificatlons]

Display 2.4 inch	2.4inch
Lens	Dual lens(Front and back)
Features	Take pictures, record video and play games
OTG	Connect your phone to view photos and videos
Video format	AVI
Battery capacity	1000mAh
Charging time	3 hours
Extended storage	Support for maximum 32GTF cards (8500 photos)
Charging voltage	DC DC-5V / 1A

MAINTENANCE!
This product can not be used in water or in a hound environment.Keep the camera outer casing and interface dry.
ATTENTON !
Please be aware that the charger is not a toy . The charger should be used under adult supervision no matter the camera is been charging or not. Please keep it dry and use as required.
NOTE!
The camera contains small parts that are not suitable for children under 3 years old . Do not get close to the fire when play.

WARRANTY CARD

Thank you for purchasing our products, please fill in the following content when purchasing the machine and keep this card properly.

User Profile

Contact	
contact number	
Purchase date	
Purchase address	
contact address	
Remark	