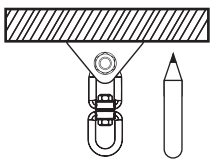
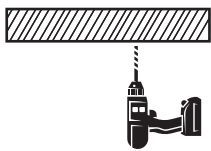
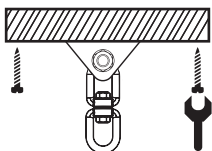
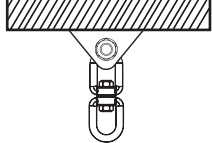


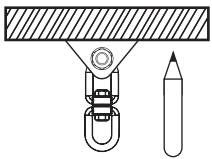
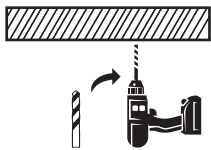
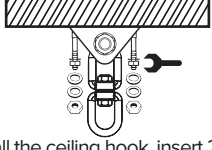
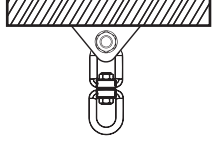


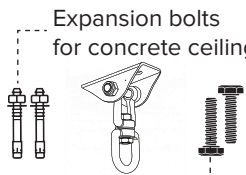
INSTALLATION GUIDE

HEX SCREWS USE ON WOOD CEILING

1  Draw the hole location on a steady wooden beam.	2  Drill 2 holes and make sure the drill bit is smaller size than the screw.	3  Install the ceiling hook, insert 2 hex screws and tighten the screws with a wrench until firm.	4  Attached the pre-assembled swing set to the hanger by using the carabiner and adjust the height with daisy chain accordingly
---	---	--	--

EXPANSION SCREWS USE ON CONCRETE CEILING

1  Draw the hole location on a steady wooden beam.	2  Use 12mm drill bit to clear holes, insert the expansion screws.	3  Install the ceiling hook, insert 2 expansion bolt into the holes. Use hammer if necessary. Tighten the screws with a wrench until firm.	4  Attached the pre-assembled swing set to the hanger by using the carabiner and adjust the height with daisy chain accordingly
--	--	--	---

INCLUDES  Swing  Daisy Chain  Carabiner  2 Hex screws for wood ceiling  Expansion bolts for concrete ceiling	TOOLS 	 Adjust the height with daisy chain so that the swing hangs about a foot above the ground. Hook the carabiner through & tighten the locking nut firmly
---	--	---