

Attaching the footrest is the hardest step in this assembly













Tighten the clamp with a spanner. Please ensure the clamp is tight and the handlebars do not turn inside the clamp.









Notice the grove inside the black casing of the brake, Please ensure this lines up with the slot in the frame and that they fit into one another.
















Ensure the parent steer rod bracket of the handlebars is on the same side of the trike as the parent steer on the parent handle. If this is not the case, loosen the handlebar clamp and turn the handlebars 180 degrees.







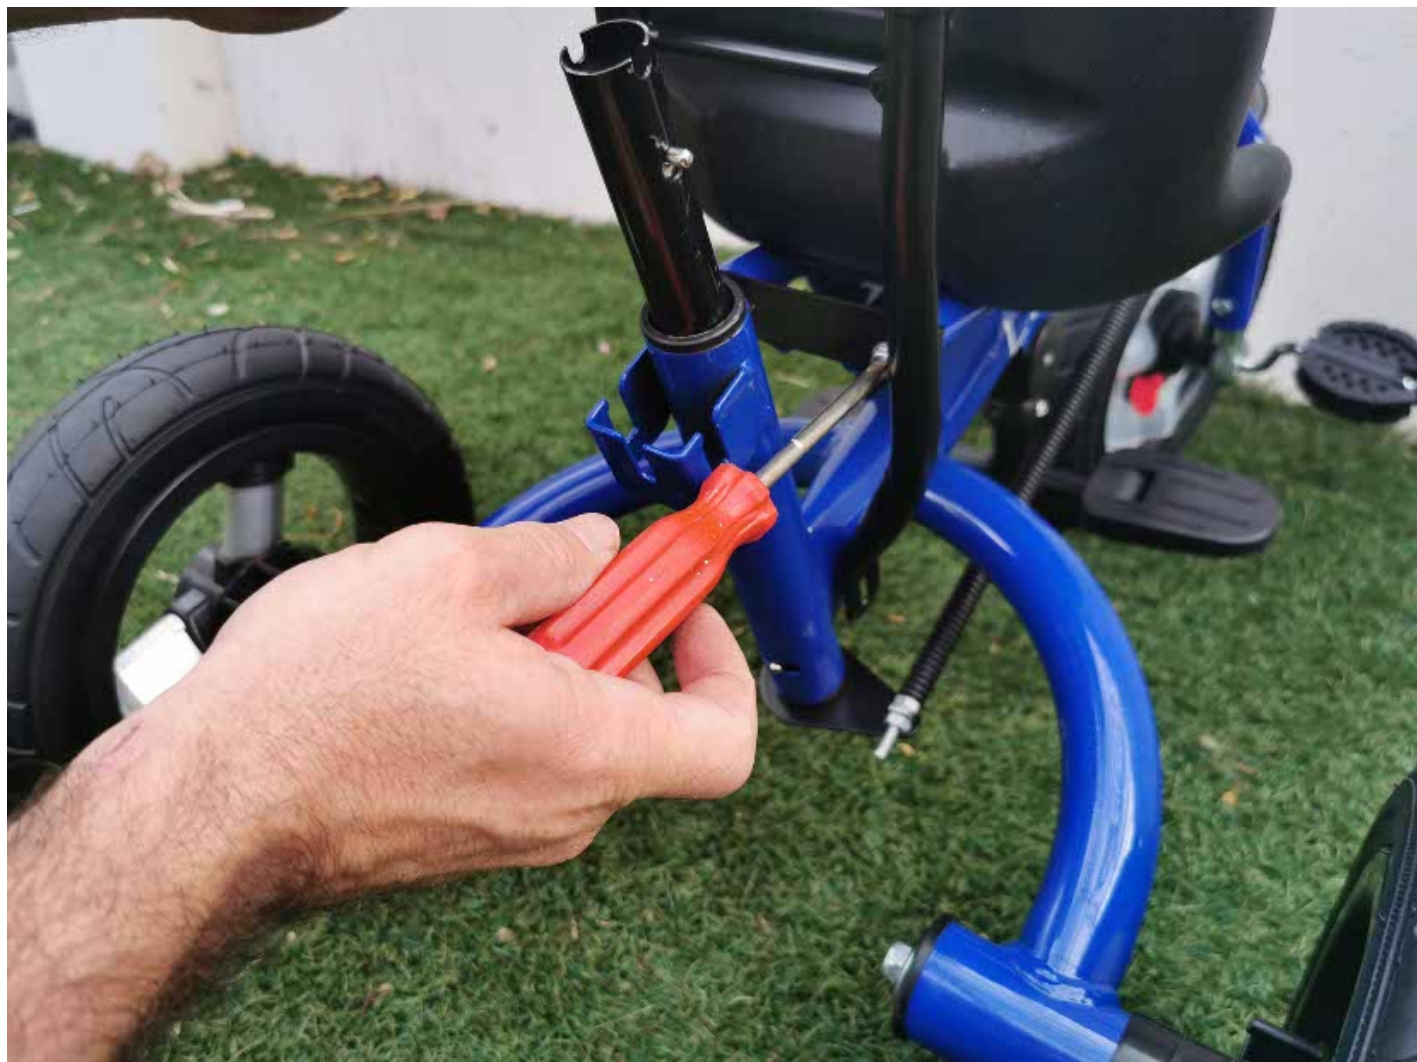

















The upper parent handle has been designed to be a tight fit.
You may need to use extra force.







