

# Push Trike Instruction Manual

**Install the front wheel.**



**Insert the front wheel assembly into the frame**




**Ensure that the top bushing is replaced if it comes off when completing the first step**



**Put the clamp protector over the stem of the handlebars and push the handlebars into the front wheel assembly**


**Put the silver clamp over the top of the front wheel assembly**



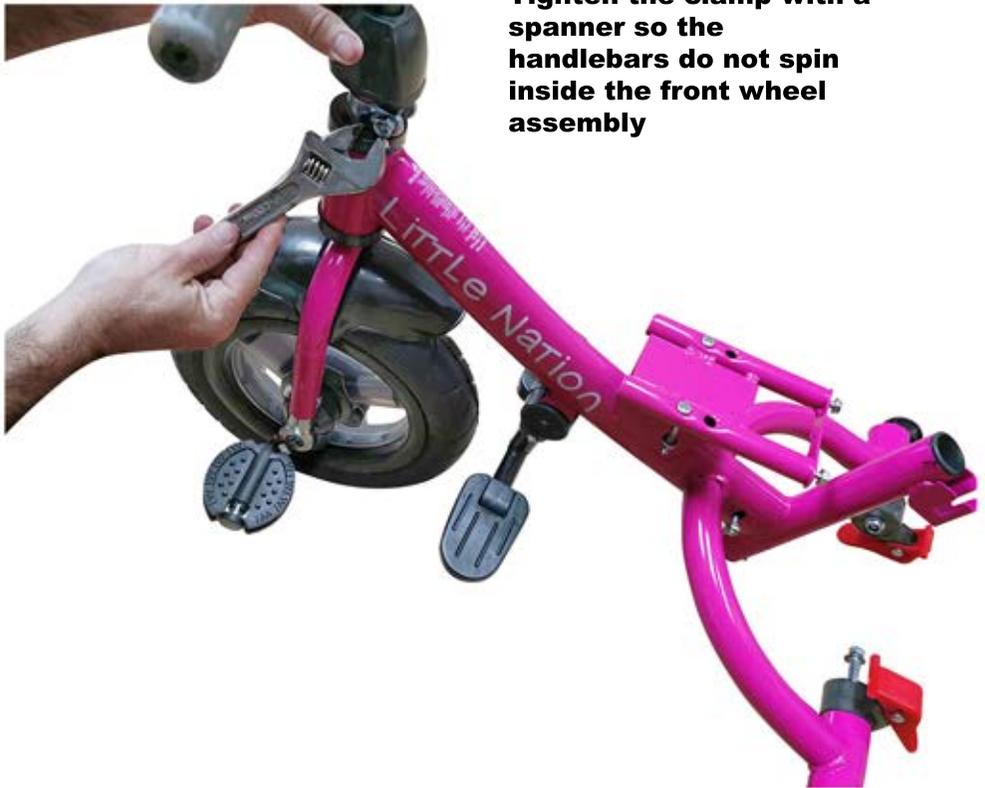

**Tighten the clamp with a spanner so the handlebars do not spin inside the front wheel assembly**


## Installing the rear wheels

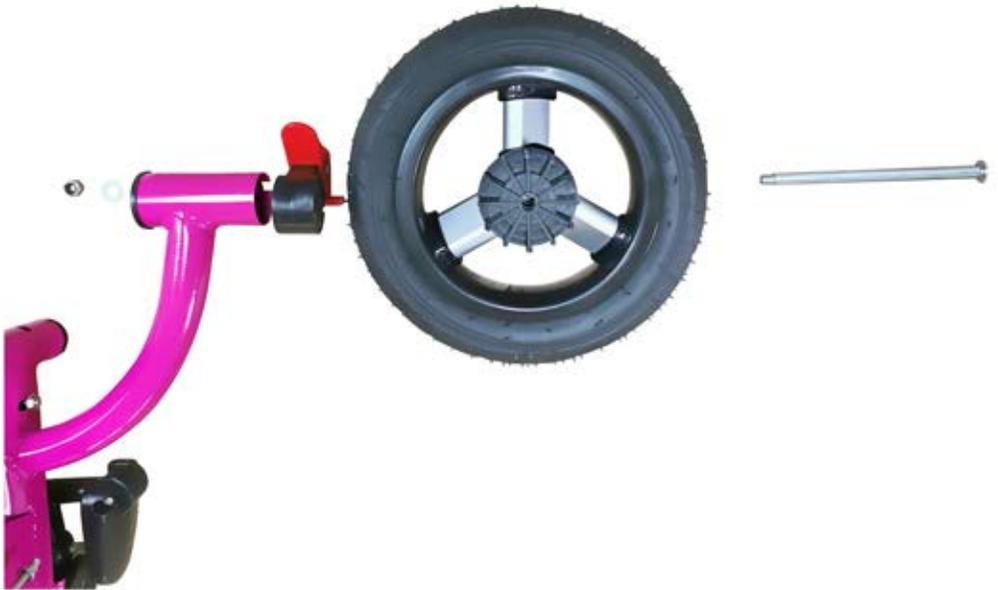



**Remove all parts from the  
rear wheel tube**

**Install the brakes on the correct side. Check the foot on the red part of the brake to determine**

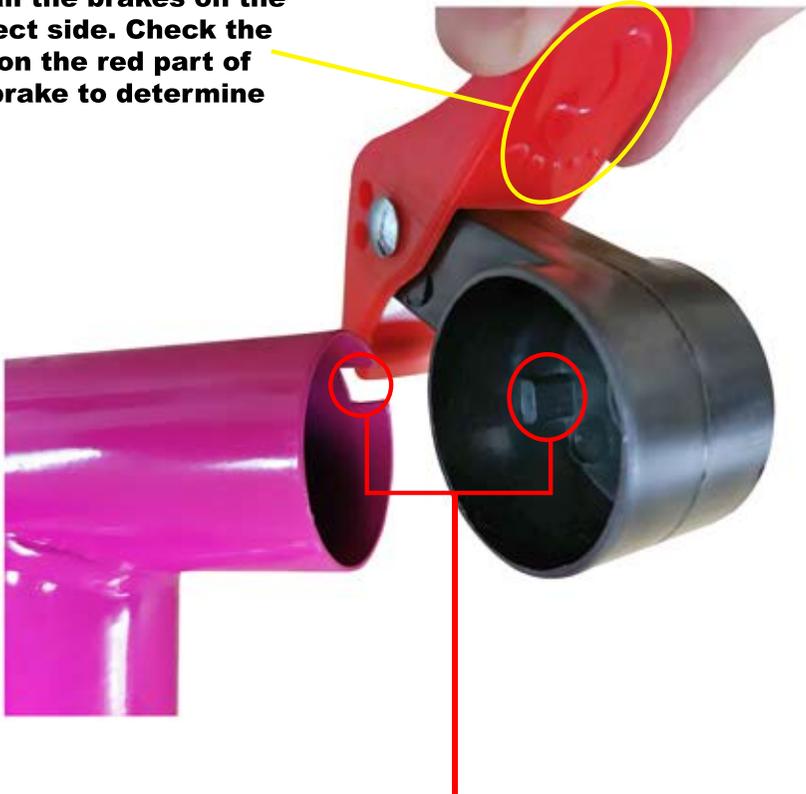

**Ensure the slot in the rear wheel tube lines up with the groove in the inside of the brake**

**Assemble the rear wheel, rear wheel bushing, brake, axle. Tighten with a spanner and allen key**












**Remove the nuts and bolts.**

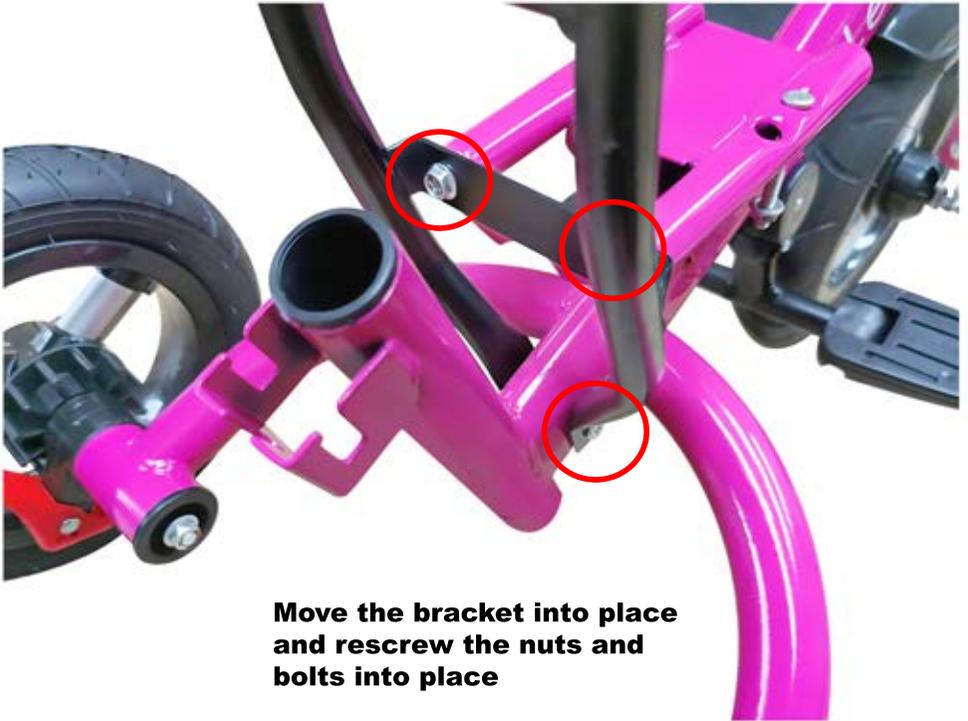

**Move the bracket into place  
and rescrew the nuts and  
bolts into place**

**Remove the plastic screw  
tops of the lower shade  
support bracket**






**Place the safety bars over the top of the lower shade sail bracket ensuring the red button on the safety bars faces the top**





**Replace the plastic  
screw tops and  
loosely tighten**

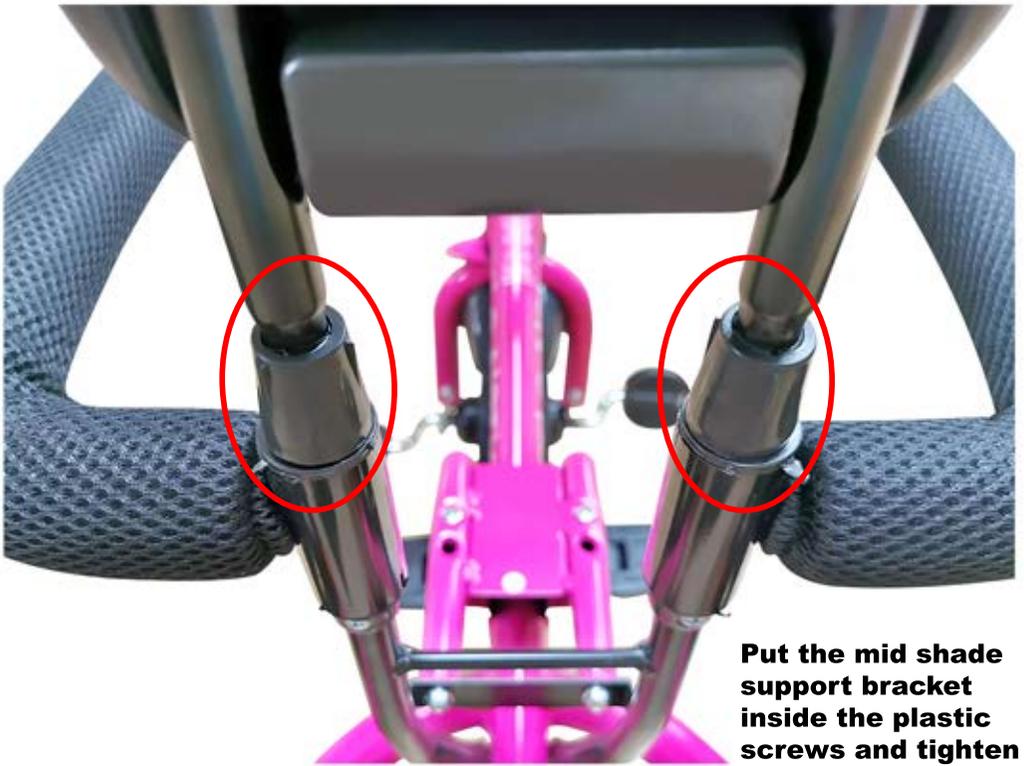

**Put the mid shade support bracket inside the plastic screws and tighten the plastic screw tops**



**Put the shade sail inside the top of the mid shade support**

**Please note. The shade is not connected with screws. This enables us to easily remove the top shade sail.**





**Attach the seat by removing and replacing the seat bolts and nuts**

**Attach the seat cover  
and tie the elastic  
under the seat**






**Feed the seat cover through the safety bars and click into place**



**Assembly the parent handle**



**Check the silver  
button faces out**

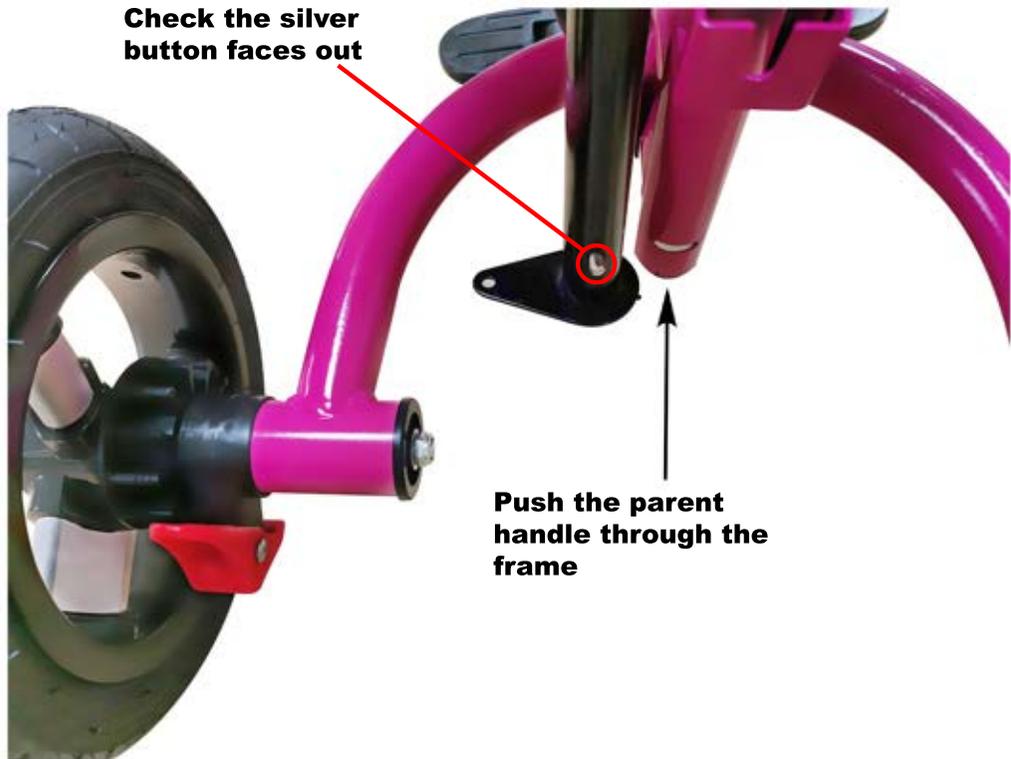

**Push the parent  
handle through the  
frame**




**Check that the silver button is sticking through the frame**



**Check that the parent handle bushing is still in place after pushing through the lower**

**Connect the parent handle. First check that the red lever is pointing down**



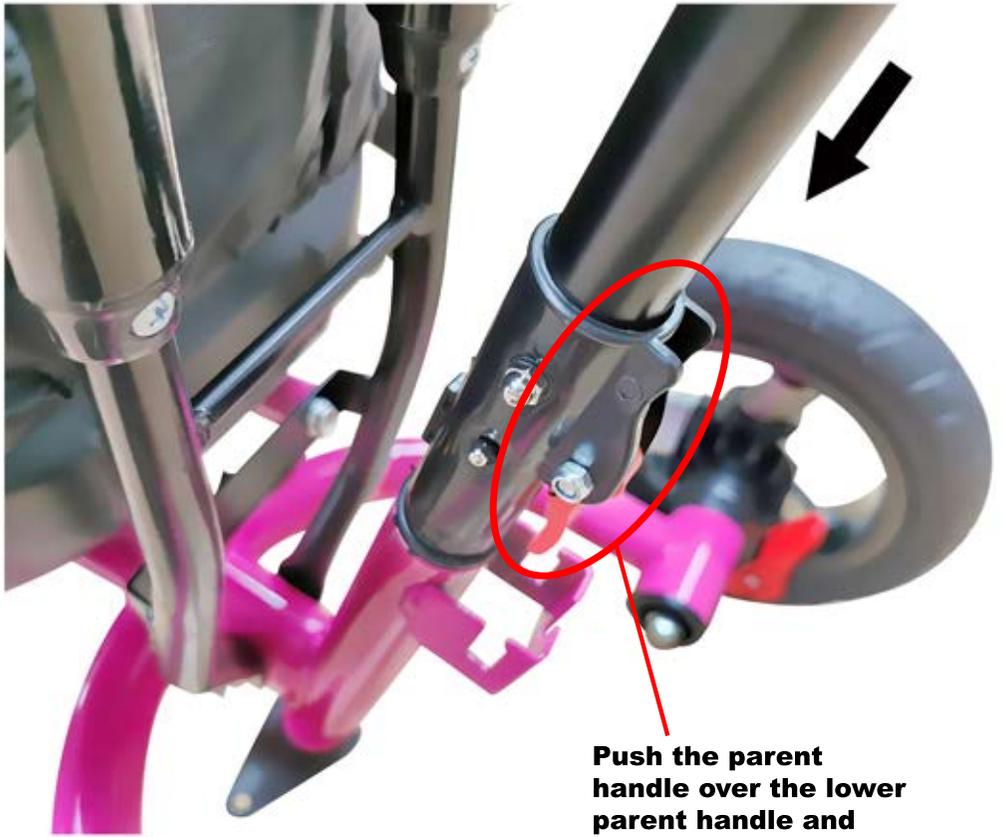

**Push the parent handle over the lower parent handle and click the red lever up**



**Connect the parent  
steer rod to the front  
wheel assembly.**




**Ensure that the bracket of the front wheel  
assembly is on the same side and the bracket of  
the lower parent handle side. If the bracket is  
not on the correct side - Please loosen the front  
clamp and spin the handlebars 180 degrees.**



**Connect the parent  
steer rod to the lower  
parent handle  
bracket.**



**For best alignment, ensure the front handlebars are facing directly forward and the parent handlebars are facing directly forward. Then tighten the nuts on the parent steer rod. See page 36.**

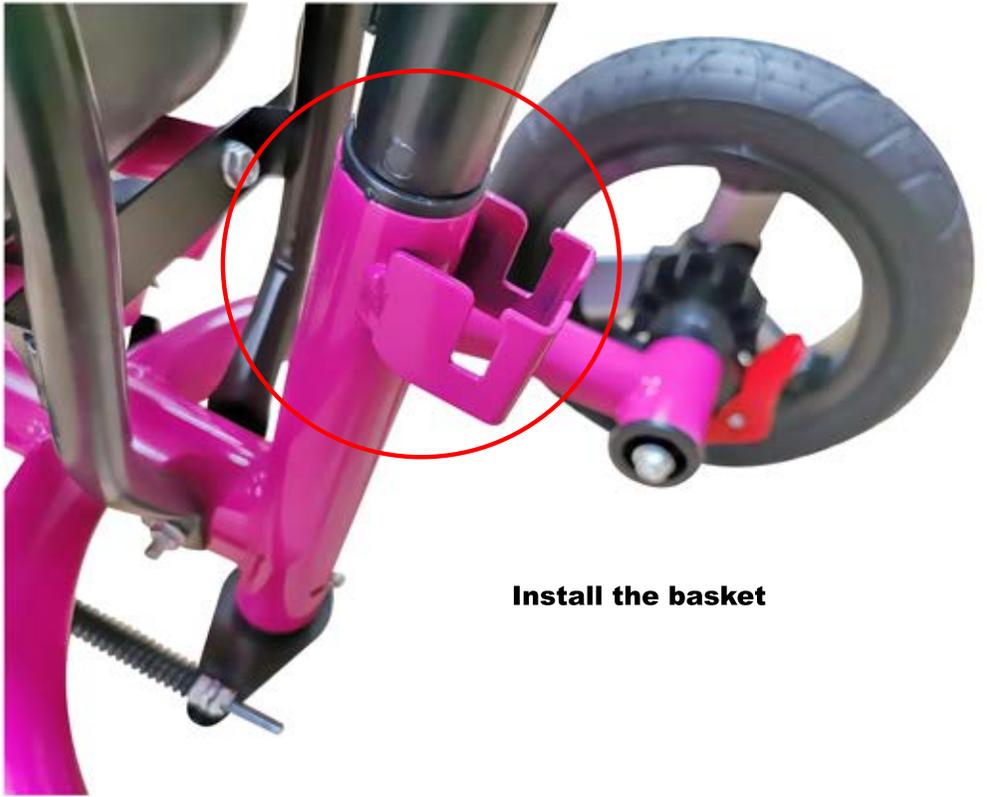

**Install the basket**



**Install the parent bag**





**Install the teather strap making sure the small loop is used for the wrist. And the large loop feed through itself. Please now go through and check all nuts, bolts and clamps have been correctly tightened**